

APPLICATION PROCEDURES

1. Make sure the surface is clean — free of dirt, grease and wax.
2. Air and surface temperature must be above 40°F. Surface may be mechanically heated to raise surface temperature.
3. Use overlapping strokes of squeegee (or old credit card) for uniform adhesion. Firm pressure on squeegee is necessary.
4. Pull off pre-mask at a 180° angle.

- (or old credit card)
3. RUB SQUEEGEE FROM CENTER OUT USING FIRM OVERLAPPING STROKES. NOTE: ADHESIVE IS ACTIVATED BY PRESSURE; YOU MUST RUB SQUEEGEE OVER 100% OF THE EMBLEM.




TO APPLY EMBLEM

1. TAPE EMBLEM INTO POSITION.




REMOVE TAPE

4. REPEAT PROCESS FOR OTHER HALF OF EMBLEM.

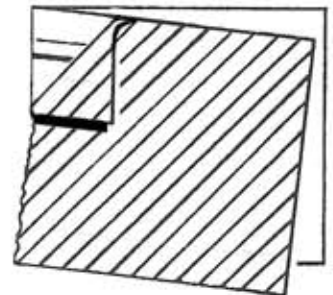

2. REMOVE BACKING PAPER FROM ONE HALF OF EMBLEM.

5. REMOVE FACE TAPE AND AGAIN RUB FINGER OVER ALL EDGES.

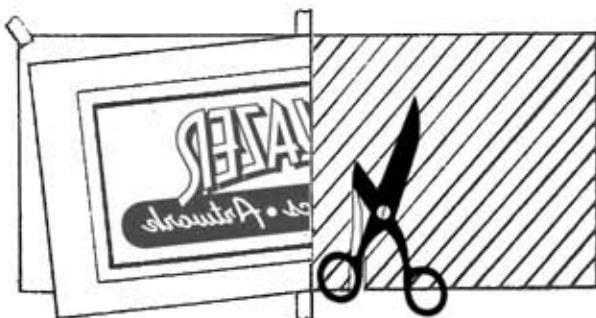

FOR REMOVAL PROCEDURES, CONTACT SIGN BLAZER AT 585-346-3160